

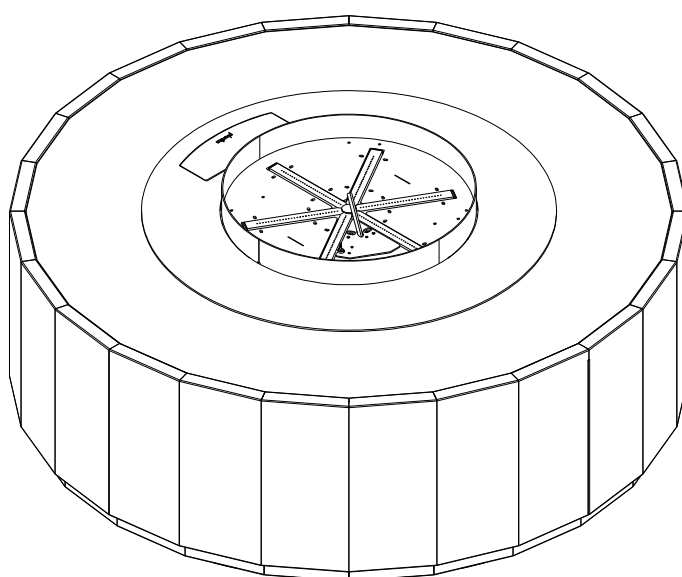


EN Installation manual

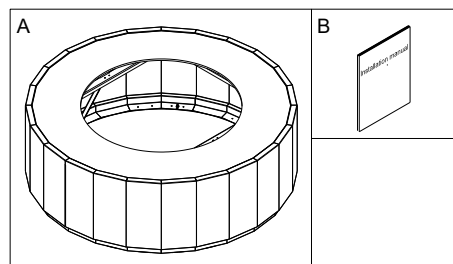


WARNING


EN This manual only applies to the installation of Comet Table only. The operation of the device is included in the dedicated manuals

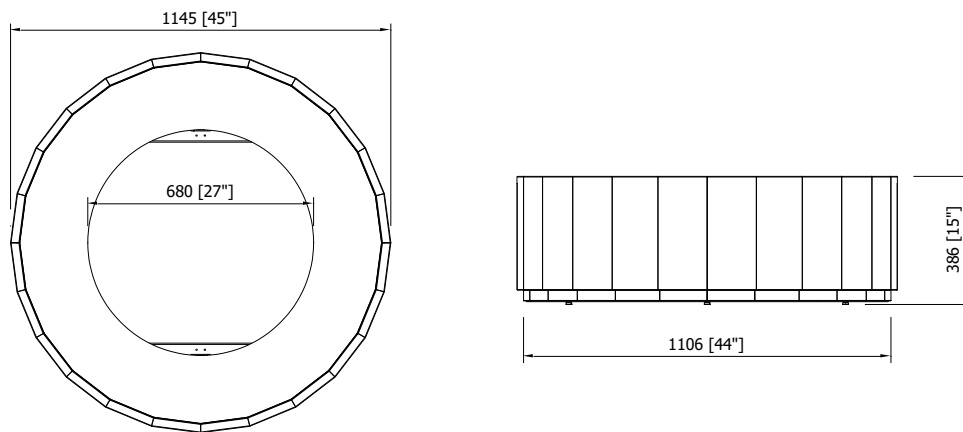


	EN	Quantity
A.	Comet Table casing	1
B.	Installation manual	1

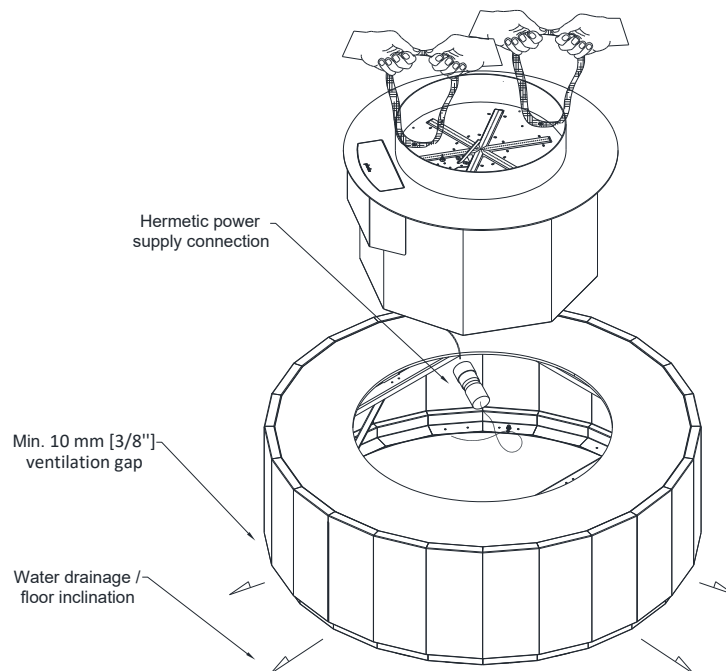

EN	Route the power cable under the fireplace structure and connect it to the unit using the supplied hermetic connector or an equivalent IP66-rated connector. Lower the burner into the recess using the lifting straps. Ensure the floor is sloped or provides drainage to remove water. Set the fireplace with a minimum 10 mm (3/8\") ventilation gap at the bottom (use the adjustable legs).
----	---

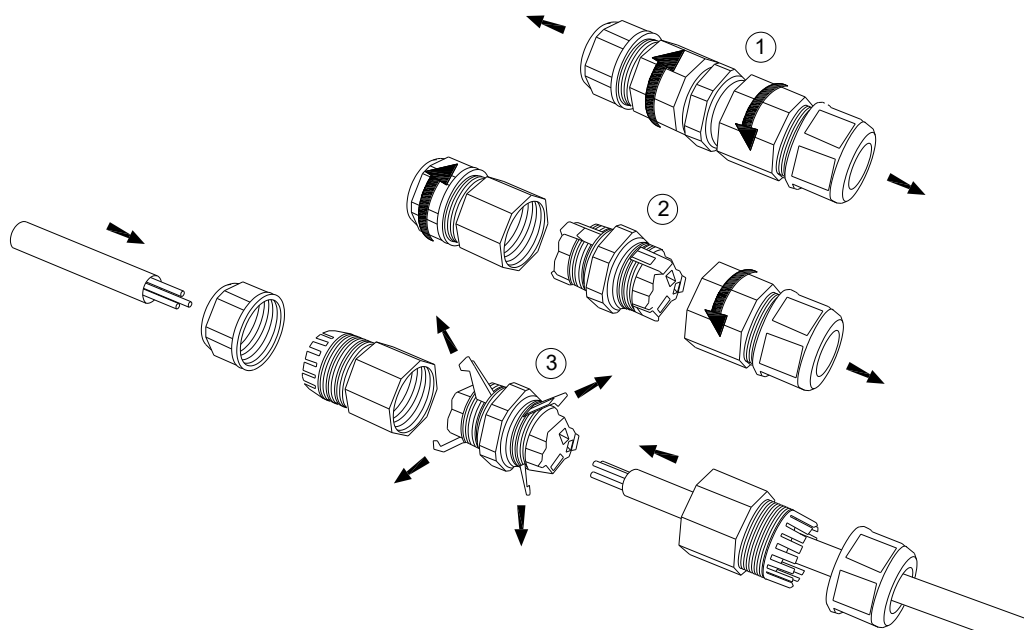

EN	Unscrew the glands of the hermetic connector, unclip the cable socket fasteners and place the cable in the dedicated slots. Take care not to damage the seals. Follow the steps in reverse order to tighten the connector.
-----------	--

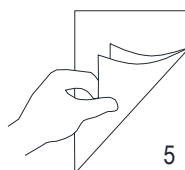

EN	Go to page 5 Comet Outdoor Installation manual (I1579_115V) for further steps.
-----------	--